



FAQ

HP REVERB VR HEADSET PROFESSIONAL EDITION, STEAMVR & WINDOWS MIXED REALITY

2

1.0 STEAMVR

3

2.0 HP REVERB VR HEADSET PRO EDITION

6

3.0 WINDOWS MIXED REALITY

7

4.0 GENERAL VR



LEARN MORE: WINDOWS MIXED REALITY PLATFORM + STEAMVR

Frequently asked questions about HP's professional head-mounted display (HMD) - built on the Windows Mixed Reality (WMR) platform - and integration with SteamVR.

The HP Reverb Virtual Reality Headset - Professional Edition offers stunning immersive computing with significant ease of setup and use in a cost effective solution. This solution is well suited for Engineering Product Dev and design reviews, AEC (Architecture, Engineering & Construction) reviews, location-based entertainment, and MRO (Maintenance, Repair and Overhaul) training use environments.

Take advantage of the complete Windows 10 Mixed Reality and SteamVR ecosystems.

IMPORTANT NOTE: HP Reverb Virtual Reality Headset - Professional Edition is not recommended for children under the age of 13. All users should read the HP Reverb Virtual Reality Headset - Professional Edition User Guide to reduce the risk of personal injury, discomfort, property damage, and other potential hazards and for important information related to your health and safety when using the headset. Windows Mixed Reality requires Windows 10 October 2018 Update installed on the workstation or PC. Features may require software or other 3rd-party applications to provide the described functionality. To minimize the possibility of experiencing discomfort using a VR application, ensure that the PC system is equipped with the appropriate graphics and CPU for the VR application. Learn more about [HP workstation VR ready configurations here](#).

REFERENCES:

[HP Reverb Virtual Reality Headset Professional Edition QuickSpecs](#)

[HP Reverb Virtual Reality Headset Professional Edition Datasheet](#)

HIGHLIGHT:

The HP Reverb VR Headset Pro Edition is built on the Windows Mixed Reality platform. Integration with SteamVR requires the Windows Mixed Reality bridge app.



FAQ

HP REVERB VR HEADSET PROFESSIONAL EDITION, STEAM VR & WINDOWS MIXED REALITY

2

1.0 STEAMVR

3

2.0 HP REVERB VR HEADSET PRO EDITION

6

3.0 WINDOWS MIXED REALITY

7

4.0 GENERAL VR

1.0 STEAMVR

Q 1.1: WHAT ARE STEAM AND STEAMVR?

Steam is a software publishing and distribution platform with an active community of VR enthusiasts that allows you to collect a library of VR and non-VR experiences. SteamVR is a software framework that connects VR software to VR hardware, it was created by the Valve Corporation and fills the same role as Microsoft's Windows Mixed Reality platform or Facebook's Oculus platform. Steam and SteamVR provides the software back-end to products like the HTC Vive, Valve Index, and the Steam controller. Steamworks is a set of tools and services that help game developers and publishers get the most out of distributing games on Steam.

Q 1.2: HOW DO I INSTALL STEAMVR ON MY SYSTEM?

First, install Steam - download and run Steam from store.steampowered.com/about.

Then, install SteamVR - once Steam is installed and you have created a Steam account, go to *EXPLORE* and search for "SteamVR". Select the install option.

Finally, install Mixed Reality for SteamVR - now that SteamVR is installed, go to *EXPLORE* and search for "Mixed Reality". Select the install option.

Q 1.3: HOW DO I LAUNCH AN APPLICATION THAT REQUIRES STEAM VR?

Connect your Windows Mixed Reality headset and launch the Windows Mixed Reality Portal. You may need to complete room set up if you are in a new location.

Open Steam and run SteamVR from the library. You should launch into SteamVR room set up if this is the first launch; otherwise, you will launch into Steam's home room.

SteamVR should show your headset and controllers in green.

Select and run a SteamVR application from the Steam library.

Q 1.4: CAN I DEVELOP DIRECTLY ON A WINDOWS MIXED REALITY HEADSET WITHOUT USING STEAMVR? WHERE CAN I FIND GUIDANCE & SUPPORT?

FOR UNREAL ENGINE 4 (UE4): Yes, you can develop for Windows MR without using SteamVR using Unreal Engine 4. You must use Windows April 2018 update or later, and UE4 version 4.21 or later. SteamVR will still launch automatically when starting UE4. There are two steps to disable this: (1) In SteamVR, under developer settings, disable 'Start SteamVR when an application starts.' (2) In your UE4 project, under plug-ins, disable the SteamVR plug-in and restart the editor. Developing for WMR should not be significantly different than developing for SteamVR. The Unreal Engine does most of the work for you and hides the details. [Access UE4 documentation here.](#)

FOR UNITY: Unity 2017.2 and later features built-in Windows Mixed Reality and HoloLens support, which includes a wide range of tools, packages, and resources that make it simple to author a game or app for both VR and MR, and makes it available in the Microsoft Store. [Learn more here.](#)

Q 1.5: HOW DO I MIGRATE HTC-BASED CONTENT (STEAMVR) TO WINDOWS MIXED REALITY?

You can play most experiences designed for the HTC Vive by using the [Windows Mixed Reality bridge](#) for SteamVR. This is available for free on the Steam store. Not all experiences are guaranteed to work; for example, the buttons may seem inappropriate or missing. If you are the content developer, you can enable the appropriate plug-in in your game's editor.

Q 1.6: CAN I LAUNCH STEAMVR WITHOUT AN INTERNET CONNECTION (OFFLINE)?

An internet connection is required to download and install SteamVR. Once the installation is complete, you can run SteamVR offline.



FAQ

HP REVERB VR HEADSET PROFESSIONAL EDITION, STEAM VR & WINDOWS MIXED REALITY

2

1.0 STEAMVR

3

2.0 HP REVERB VR HEADSET PRO EDITION

6

3.0 WINDOWS MIXED REALITY

7

4.0 GENERAL VR

2.0 HP REVERB VR HEADSET PRO EDITION

Q 2.1: HOW DO I OPTIMIZE THE HEADSET RESOLUTION IN STEAMVR AND/OR ON WMR?

WINDOWS MIXED REALITY PORTAL (RUNNING ON WINDOWS 1809 AND EARLIER): There is currently no way to change the resolution.

WINDOWS MIXED REALITY PORTAL (RUNNING ON WINDOWS 1903 AND LATER): Press the Windows key and type "Headset Display Settings." Settings can be adjusted under *RESOLUTION*.

STEAMVR: Open the menu in the upper-left of Steam VR and select *SETTINGS*. In *SETTINGS*, click the *VIDEO* menu. Check *ENABLE CUSTOM RESOLUTIONS*. Adjust the resolution using the slider.

With Microsoft release 1809 and earlier, all computer systems require an external display attached in addition to the VR headset. If only the VR headset is attached (e.g. backpack configuration) or if the system "thinks" that only a VR headset is attached without an external display, the operating system will blank (black out) the VR headset. One solution is to upgrade to Windows 10 version 1903 (May 2019 release). You can also purchase a hardware EDID emulator to fool the system into thinking an external display is attached (search Amazon for "EDID Emulator"), or connect an external display to the system.

Q 2.2: WHAT IS THE RECOMMENDED MINIMUM PLATFORM CONFIGURATION?

GRAPHICS: DX12 capable graphics. NVIDIA® GTX 1080, NVIDIA® Quadro® P5200, AMD Radeon™ Pro WX 8200, (update or later); equivalent or better

PROCESSOR: Intel® Core™ i7, Intel® Xeon® E3-1240 v5; equivalent or better

MEMORY: 16GB RAM or more

VIDEO OUT: DisplayPort™1.3/USB ports: 1x USB 3.0

OS: Windows 10, October 2018 or later

Q 2.3: CAN I DO A FREE ROAM OR LARGE-SCALE ROOM SET UP? HOW DO I SET UP FOR A FREE ROAM EXPERIENCE?

The tracking system on the HP Reverb VR Headset Pro Edition is designed to work in an area where you have an unobstructed view of your walls and floor. Large scale experiences, such as where you pass between rooms or hallways and see many different walls, requires an external tracking system. There are many external tracking systems available, such as those manufactured by Mo-Sys, OptiTrack, Vicon, and PhaseSpace.

Q 2.4: CAN I ADJUST THE INTERPUPILLARY DISTANCE (IPD) OF THE HEADSET?

The software IPD setting adjusts the vergence of the eyes. By shifting the IPD, you change how far the eyes point in/out to both focus on an object. This adjusts the perceived scale in the world (by adjusting how far away it seems like things are). You shouldn't see much change in image clarity, except in that your eyes might pass through a slightly different point on the lens, but it should be fairly minimal.

Mechanical IPD adjust, like that found in the HTC Vive, actually moves the lenses back and forth and so should generate a much more noticeable difference in clarity. It will change whether or not you are looking through the sweet spot of the lens.

Q 2.5: IS THERE A SOFTWARE IPD ADJUSTMENT OPTION? WHY ISN'T THERE IPD HARDWARE ADJUSTMENT?

To change IPD within your headset, open the *Settings* app and navigate to *Mixed reality > Headset* display and move the slider control. You will see the changes in real time in your headset. If you know your IPD, maybe from a visit to the optometrist, you can enter it directly as well.

You can also adjust this setting by going to *Settings > Mixed reality > Headset* display on your PC. If your headset does not support IPD customization, this setting will be disabled. [Learn more here.](#)

The optical system in the HP Reverb VR Headset Pro Edition is designed to accommodate a large



FAQ

HP REVERB VR HEADSET PROFESSIONAL EDITION, STEAM VR & WINDOWS MIXED REALITY

2

1.0 STEAMVR

3

2.0 HP REVERB VR HEADSET PRO EDITION

6

3.0 WINDOWS MIXED REALITY

7

4.0 GENERAL VR

range of pupil distances. Because of the large accommodation of pupil distance, HP was able to remove the complexity of manual IPD adjustment.

Q 2.6: HOW DOES THE AUDIO WORK? DO I NEED TO USE THE AUDIO JACK CABLE ON THE BACK OF THE HEADSET?

Audio is supplied via the USB connection on the headset and is played through the built-in speakers. You do not need to use the audio jack unless you have a preferred audio headset you would rather use. The audio jack cable cannot be removed.

Q 2.7: ARE THERE GOOD OPTIONS TO MAKE THE HP REVERB HAND CONTROLLERS RECHARGEABLE?

The only option currently is to use rechargeable AA batteries with an external charger. Rechargeable batteries are not recommended since they operate at a lower voltage and may not last as long as standard alkaline batteries. Non-rechargeable lithium AA batteries may provide longer battery life than standard alkaline batteries.

Q 2.8: HAS THE HEADSET BEEN SUCCESSFULLY TESTED WITH CABLE EXTENSIONS?

Cable extensions are not recommended as they may not maintain bandwidth. The provided 4.0 meter cable is considered optimal.

Q 2.9: IS THE VIDEO SIGNAL CABLE DISPLAYPORT™ OR MINI-DISPLAYPORT™ AT THE PC END?

The cable attached to the headset is DisplayPort™ 1.3; the HP Reverb VR Headset Pro Edition comes with a DisplayPort™ to mini-DisplayPort™ adapter.

Q 2.10: CAN THE DISPLAYPORT™ BE ADAPTED TO WORK ON A LAPTOP THAT ONLY HAS HDMI? ARE THERE ANY KNOWN HDMI ADAPTERS THAT WILL WORK RELIABLY WITH THE HEADSET?

No, the HP Reverb VR Headset Pro Edition requires DisplayPort™ 1.3; HDMI adapters cannot handle the bandwidth required.

Q 2.11: ARE REPLACEMENT CABLES AVAILABLE FOR PURCHASE?

Yes, replacement cables can be purchased separately.

Q 2.12: ARE REPLACEMENT LENSES AVAILABLE FOR PURCHASE?

No, the lenses are not replaceable. While the lenses are removable, doing so may void your warranty.¹

Q 2.13: CAN YOU WEAR EYEGLASSES WHILE USING THE HEADSET? ARE THERE LENS SPACERS OR PROTECTORS AVAILABLE TO PROTECT MY EYEGLASSES?

Yes, most eyeglasses will fit comfortably with the headset. There are no spacers, but the face padding is sufficient to hold the HMD away from your eyeglasses in most instances.

Q 2.14: WHY LCD PANELS INSTEAD OF OLED PANELS IN THE HP REVERB VR HEADSET PRO EDITION?

LCD panels provide superior color and clarity compared to OLED panels, and they are also less expensive. Each pixel in a display is composed of colored sub-pixels, and the combinations of brightness of the sub-pixels combine to create the color your eyes see from the pixel. In LCD displays, each pixel has a red, green, and blue sub-pixel, which is an optimal arrangement. In most OLED panels, the sub-pixels are arranged in a PenTile pattern, which leaves most pixels with only two colors of sub-pixels. LCDs also have better fill ratios, meaning that there is less black space between pixels, creating less 'screen door' effect and greater image clarity.

Q 2.15: HOW DOES THE HP REVERB VR HEADSET PRO EDITION VISUAL SWEET SPOT COMPARE TO THE HP WINDOWS MIXED REALITY HEADSET PROFESSIONAL EDITION?

The 'visual sweet spot' refers to the area the eye can occupy and still see the displayed image with high clarity. A larger sweet spot allows for a greater variation of eye positions and head anatomy.



FAQ

HP REVERB VR HEADSET PROFESSIONAL EDITION, STEAM VR & WINDOWS MIXED REALITY

2

1.0 STEAMVR

3

2.0 HP REVERB VR HEADSET PRO EDITION

6

3.0 WINDOWS MIXED REALITY

7

4.0 GENERAL VR

'Sweet spot' is not a technical term, so there's no specific measurement to use for reference, but we observe that the HP Reverb's sweet spot is significantly larger than the one in the HP Windows Mixed Reality headset.

Q 2.16: HOW DOES THE HP REVERB VR HEADSET PRO EDITION CONTROLLER BATTERY LIFE COMPARE TO THE HP WINDOWS MIXED REALITY HEADSET PROFESSIONAL EDITION CONTROLLERS?

The controllers for both headsets are virtually identical; you will not notice a difference in battery life between the two. Battery life varies dramatically based on the intensity of usage, type of battery, and whether haptic feedback (vibration) is used.

Q 2.17: CAN I DISABLE THE WINDOWS BUTTON ON THE CONTROLLER?

You can only disable the Windows button by setting the entire computer to 'kiosk mode.' In kiosk mode, the user can only access a limited set of applications, and the Windows key is inactive. Kiosk mode may not be appropriate for your use case.

In previous versions of Windows, pressing the Windows button would close the running VR application and bring up the Welcome Cliff House. Now, it only brings up the quick action menu. You may not need to disable the Windows key on newer versions of Windows.

Information about setting your computer into kiosk mode can be found [here](#).

Q 2.18: DOES THE HP REVERB VR HEADSET PRO EDITION SUPPORT GESTURE RECOGNITION?

No, WMR headsets do not currently support gesture recognition.

Q 2.19: HOW DO I GET HP REVERB VR HEADSET PRO EDITION TO WORK WITH VALVE KNUCKLES, HTC VIVE HAND CONTROLLERS, OR HTC VIVE OBJECT TRACKER?

This can be achieved using the *OpenVR-InputEmulator*. [Find the instructions here](#). Note that set up requires HTC external trackers (base stations) to track the controllers and the process can be quite time-consuming. If the base stations are moved, controllers will need to be completely reconfigured from the beginning of the set up process.

Q 2.20: WHY ARE THERE ONLY 2 INSIDE-OUT CAMERAS?

Two inside-out cameras are sufficient to track the headset with six degrees of freedom.

Q 2.21: CAN I ACCESS THE CAMERA DATA/SOFTWARE DEVELOPER'S KIT?

The camera data is not available for developers. However, when wearing the headset you can peek into the real world through the cameras using flashlight mode. You can access flashlight mode by opening the Windows menu with the controller, or if voice commands are on, by saying "flashlight."

Q 2.22: CAN THE HP REVERB VR HEADSET PRO EDITION BE USED OUTDOORS?

The headset is not designed for outdoor use. Using the system outdoors is unsafe because you cannot see your surroundings. Additionally, the tracking system is optimized for indoor environments, so you may spontaneously lose tracking and be unable to recover it if outdoors.



FAQ

**HP REVERB VR
HEADSET
PROFESSIONAL
EDITION, STEAM
VR & WINDOWS
MIXED REALITY**

2

1.0 STEAMVR

3

2.0 HP REVERB VR HEADSET PRO EDITION

6

3.0 WINDOWS MIXED REALITY

7

4.0 GENERAL VR

3.0 WINDOWS MIXED REALITY (WMR)

Q 3.1: WHAT COMMON HEADSET TRACKING CHALLENGES MIGHT I RUN INTO AND HOW DO I RESOLVE THEM?

The tracking system should provide six degrees of freedom (6DOF), which means movement in three dimensions (front-back, left-right, and up-down) and rotation in three dimensions (yaw, pitch, and roll). Sometimes you may get only rotation tracking (3DOF). This usually occurs when the headset has been unable to see the floor and/or walls for more than a few seconds. The issue can be resolved by allowing the cameras to get a clear view of the floors and walls.

Another possible issue is that the floor is not in the right position, or your starting position in your VR experience is not where you want it to be in the real world. Both issues can be resolved by opening the Windows Mixed Reality window and going through room setup again.

Q 3.2: WHAT KNOWN HAND CONTROLLER TRACKING CHALLENGES ARE THERE AND WHAT ARE THE RECOMMENDED SOLUTIONS?

The hand controllers will only track when the cameras on the headset can see them. A good rule of thumb is that if you cannot see the controllers in your VR experience, then the headset cannot see them either. Keep the controllers in the tracked area to maintain optimal tracking. If you still cannot see the controllers, be sure that they are paired to the headset.

Q 3.3: CAN I RUN WMR WITHOUT AN INTERNET CONNECTION (OFFLINE)?

Yes, after initially configuring the Windows Mixed Reality Portal using an internet connection. The first time the Windows Mixed Reality Portal is set up, updates will download and install from the internet. After set up, you can work offline.

Q 3.4: HOW DO I RUN OCLUS APPLICATIONS ON THE WMR PLATFORM?

“Revive” allows you to run Oculus applications in SteamVR. You will need to have SteamVR set up on your system in order to take advantage of Oculus applications. Revive’s Wiki page includes setup instructions and a troubleshooting guide - [get it here](#).

Q 3.5: MY HEIGHT IS NOT CORRECT IN VR - HOW DO I FIX IT?

OUTSIDE A VR EXPERIENCE: Run room setup.

INSIDE A VR EXPERIENCE: Navigate to the Windows Cliff House, press the Windows button to open the start menu, click on *ALL APPLICATIONS* and open the *ROOM CALIBRATION* app.

Q 3.6: MULTIPLE SETS OF HP WMR DEVICES ARE DEPLOYED IN ADJACENT AREAS – IS MUTUAL INTERFERENCE GOING TO BE AN ISSUE?

WMR devices typically do not have trouble operating near each other. For example, you should not experience problems with tracking. However, the controllers and headsets are connected by Bluetooth®. Like all Bluetooth® devices, if there is too much radio interference then there may be connectivity issues.

Q 3.7: DOES WMR SUPPORT THE DEVELOPMENT OF MULTI-PLAYER APPLICATIONS?

Creating multi-player applications is a complex challenge. While it is possible to create spaces that are shared in both VR and the real world, neither software platforms nor game engines offer native support today; currently, all solutions must be improvised.



FAQ

HP REVERB VR HEADSET PROFESSIONAL EDITION, STEAM VR & WINDOWS MIXED REALITY

2

1.0 STEAMVR

3

2.0 HP REVERB VR HEADSET PRO EDITION

6

3.0 WINDOWS MIXED REALITY

7

4.0 GENERAL VR

4.0 GENERAL VR

Q 4.1: WHAT IS MEANT BY SIX DEGREES OF FREEDOM?

Six degrees of freedom refers to the basic ways an object can move through 3D space. Three degrees correspond to rotational movement around the x, y and z axes; the other three relate to translational movement along the same axes, such as moving forward or backward, moving left or right, and moving up or down.

Q 4.2: AS A DEVELOPMENT OPTION, WHAT ARE THE TRADE-OFFS OF DEVELOPING FOR STEAM VR VS. SUPPORTING THE WINDOWS MIXED REALITY PLATFORM NATIVELY?

Supporting Windows Mixed Reality natively will allow your users to use your content without needing Steam VR. This can be important in corporate or secure environments where logging into a Steam account may not be possible.

Q 4.3: WHAT IS THE BEST WAY TO SECURE CONTENT?

Use standard best practices for securing storage devices on computers, such as hard drive encryption.

Q 4.4: WHAT ARE FIDUCIAL MARKERS?

Fiducial markers are visible objects used as reference points or measuring units. In VR, fiducial markers are used for positional tracking of HMDs and input devices. Fiducial markets can be utilized in both inside-out tracking and outside-in tracking.

Q 4.5: WHAT IS INSIDE-OUT TRACKING?

The HP Reverb VR Headset Pro Edition uses inside-out tracking, a positional tracking method to track the position of the HMD and controllers. With inside-out tracking, the cameras are locating on the HMD, as opposed to outside-in tracking, which relies on stationary external sensors.

7.

HP INC. CREATES TECHNOLOGY THAT MAKES LIFE BETTER FOR EVERYONE, EVERYWHERE. THROUGH OUR PORTFOLIO OF PRINTERS, PCS, MOBILE DEVICES, SOLUTIONS, AND SERVICES, WE ENGINEER EXPERIENCES THAT AMAZE. MORE INFORMATION ABOUT HP VR SOLUTIONS IS AVAILABLE AT:

HP.COM/GO/REVERBPRO

1. One (1) year standard limited warranty. Optional Care Packs are available to extend your protection beyond the standard limited warranty. For details, visit hp.com/go/cpc.

© 2019 HP Development Company, L.P. The information herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

4AA7-5433ENW, May 2019